

hush.
acoustics
Timbre

Spec Document




Check the product page

Quiet by Design



Timbre V1 · 'Pinnacle Walnut' Laminate · Restaurant

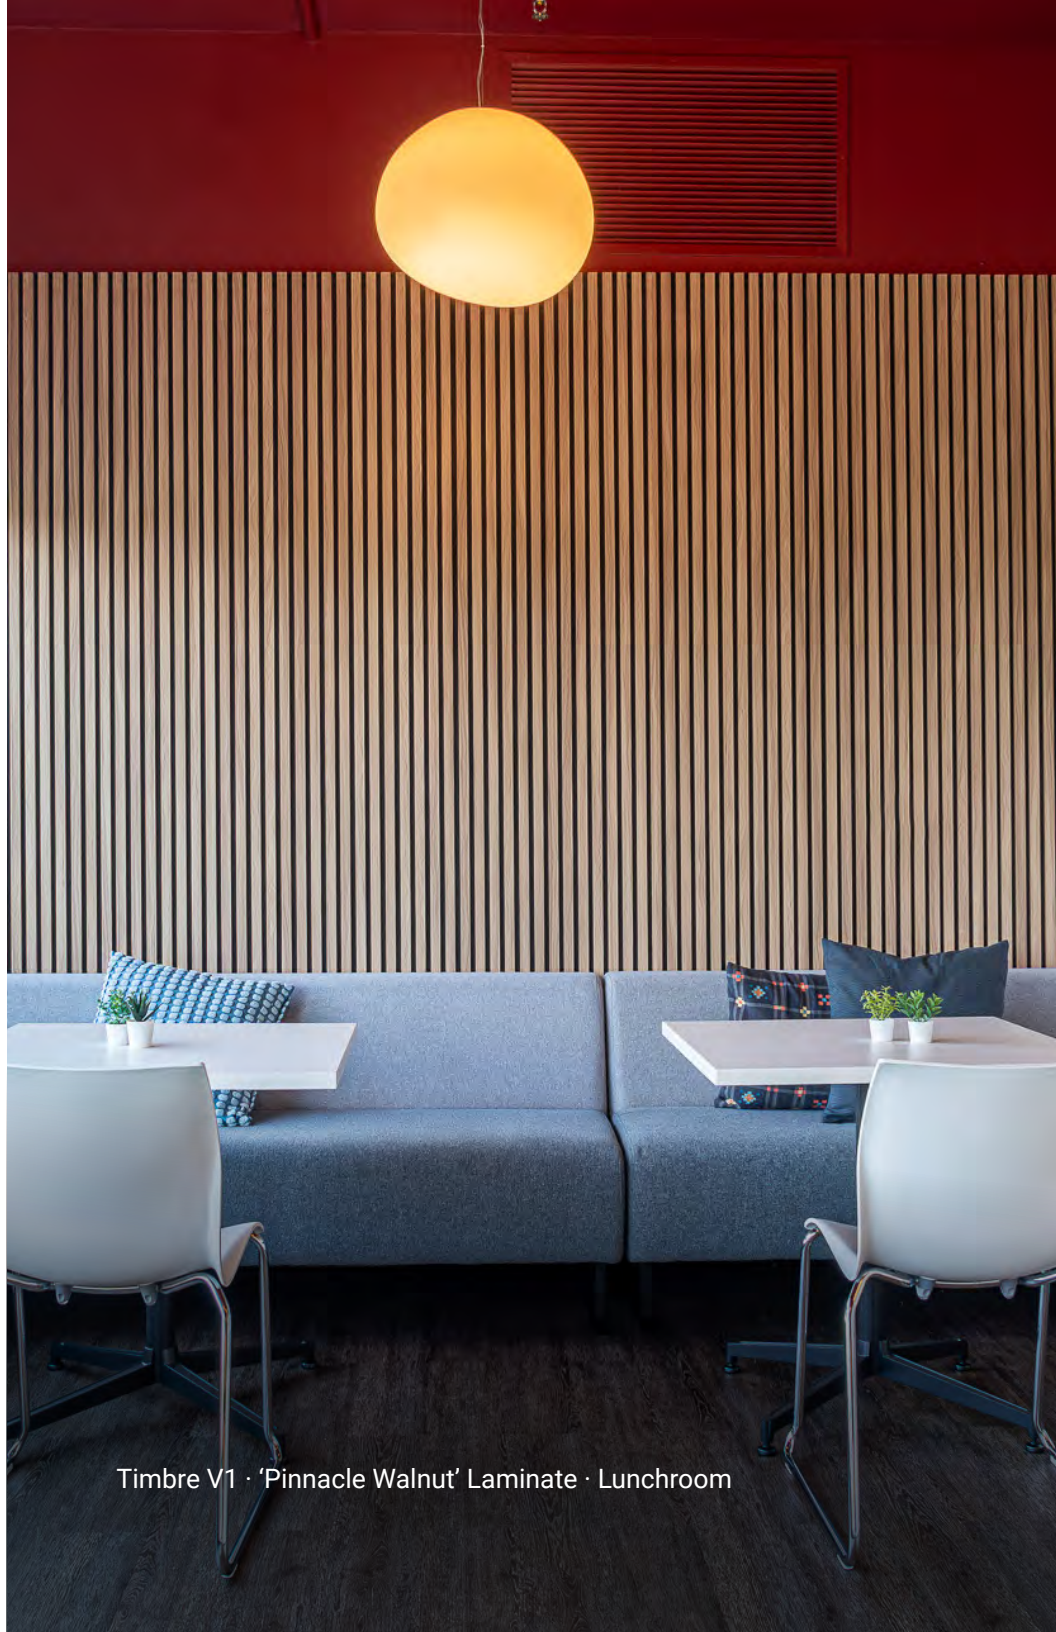

Timbre V1 · 'Pinnacle Walnut' Laminate · Lunchroom


Timbre

Combining the acoustic tiles with wood finish panels will add grace and sophistication to any design.

PRODUCT SPECIFICATIONS

Composition	100% PET (Polyethylene Terephthalate); 60% recycled material
Thickness	26mm total thickness
Product Placement	Walls, Ceiling
NRC	0.5 - 0.8
Fire Rating	CAN/ULC-S102 Class A ASTM E84 Class A
Sustainability	100% Recyclable
Warranty	2 Year Limited


NOISE REDUCTION COEFFICIENT COMPARISON

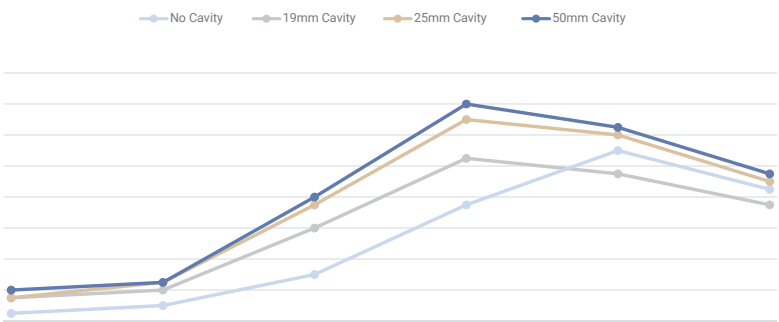

Full NRC comparison available upon request



TIMBRE V1

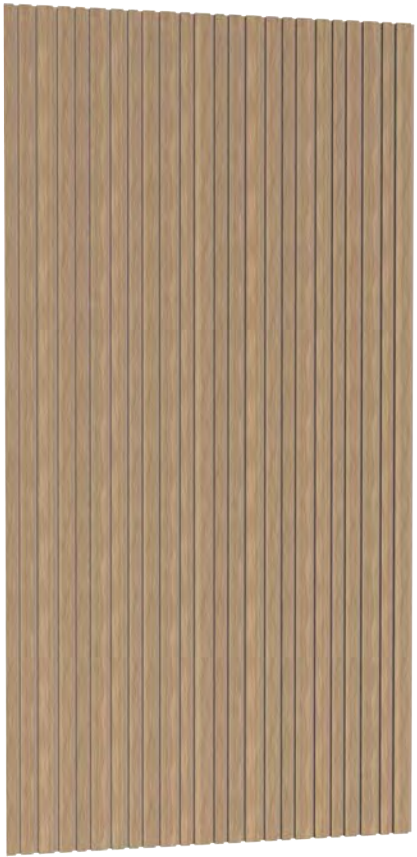

TIMBRE V2

Timbre

GREENGUARD® GOLD CERTIFICATION

Hush Acoustics has achieved full GreenGuard® Gold sustainability certification, a mark of excellence that ensures our products meet strict standards for low chemical emissions, promoting healthier indoor air quality.

This recognition gives architects, designers, and consumers confidence in choosing Hush for environmentally responsible solutions. Beyond sustainability, Hush’s felt products offer excellent sound-absorbing properties, making them ideal for creating quieter, more comfortable spaces.

SUSTAINABILITY

Manufactured from 100% PET(60% recycled material), our felt products demonstrate our commitment to both environmental stewardship and functional design, contributing to a greener and quieter future. It comprising of flame-retardant fiber as new material ensuring ASTM E84 class A certification. The high strength of PET panels in comparison to its weight is the key to its superior energy efficiency.

FUNGAL RESISTANT

Independently tested by EMSL Canada, Hush P.E.T. felt showed zero mold growth under ASTM C1338 laboratory conditions, confirming exceptional durability.

WARRANTY

2 year limited warranty. See F.A.Q. page on our website for more information.

COMPLIMENTARY DOCUMENTATION



Environmental
Product Declaration



Felt
Maintenance Guide



Flame
Spread

See Resource Hub page on website for more documentation

TIMBRE


<i>mm</i>	<i>inches</i>
600 x 2400	23.6 x 94.5

* Custom sizes available upon request


Timbre

HOW TO SPECIFY

1. Select Design

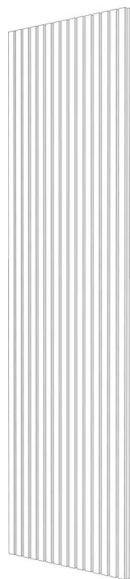


V1

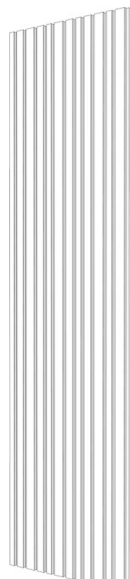

V2

2. Select Size


See [page 4](#) for full size chart



3. Select Colour



Element

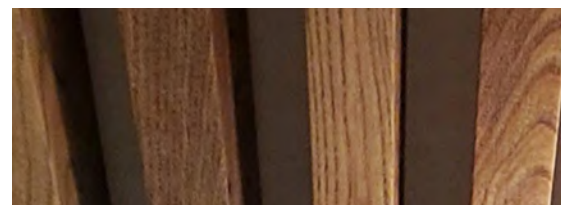


Wood Grains & Laminates

Timbre

WOODEN SLAT OVERVIEW

Topped with WilsonArt® Laminate


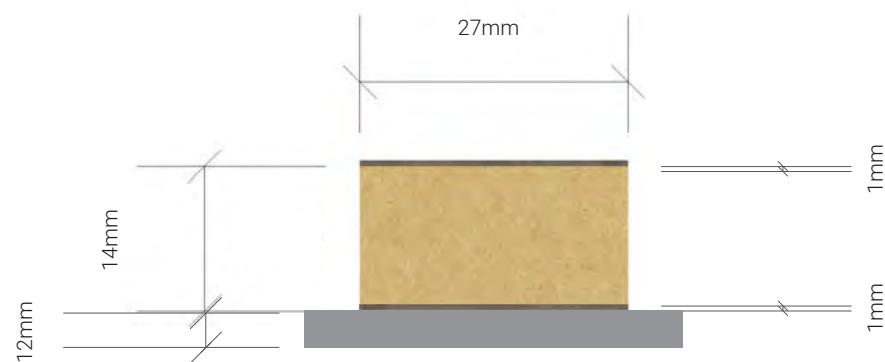


MDF BACKING OPTIONS



All Element Colour Options Available

PLAN VIEW

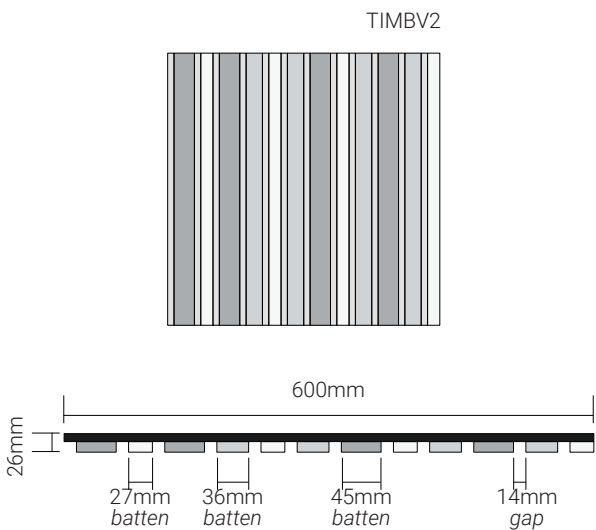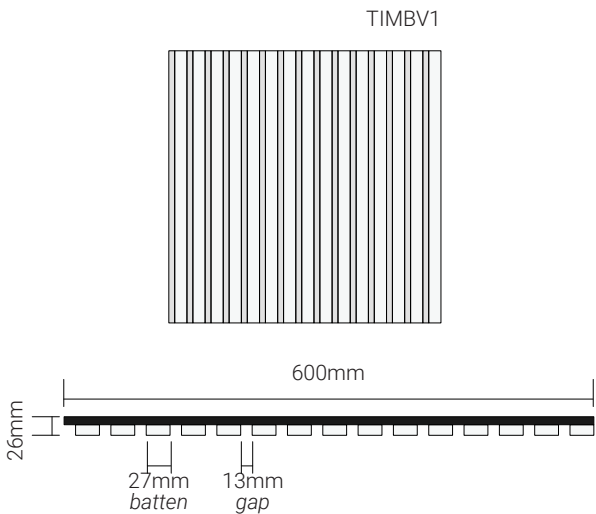


Timbre


Before installation, unpack and lay out all panels in their final location under the intended lighting conditions (natural and/or artificial). Review the panels from typical viewing angles to confirm the most visually pleasing arrangement and ensure the colors and finishes meet expectations before installation.

INSTALLATION INSTRUCTIONS


1. Identify the back of the Timbre panel. Working quickly, use a back and forth pattern to apply an even bead of adhesive to the back of the panel as shown below.

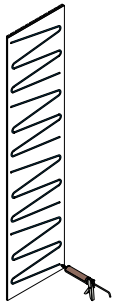


2. Your Timbre panel is now ready to be installed on the wall in the desired location.
(Please note that the Timbre panel should be mounted on the wall within 60 seconds of applying adhesive).

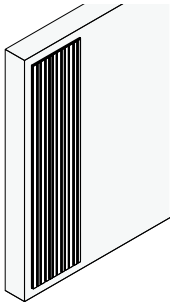


3. With the Timbre panel now located on the wall, apply firm pressure evenly over the entire surface of the Timbre panel. Now, using a countersunk screw suitable for your wall material, place a screw into the felt portion of both upper corners of the panel shown below. Tighten the screw until the head of the screw is flush with the surface of the felt. Repeat this process for both corners at the base of the panel. Your Timbre panel is now fully installed.

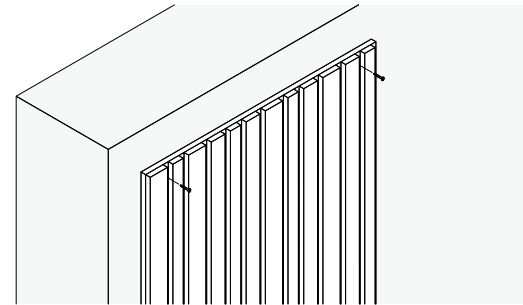

4. In the event that you need to make cuts to your Timbre panel, begin by placing removable tape over the intended cut line.
Important note: Confirm that the direction of blade rotation is correct for ensuring a clean cut on the laminate surface of the Timbre slats. You may need to mark and cut on the back of the panel to accommodate the direction of blade rotation.

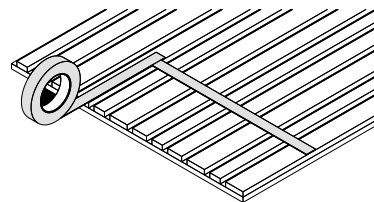

5. Now, using a pencil, mark your cut line on the tape.

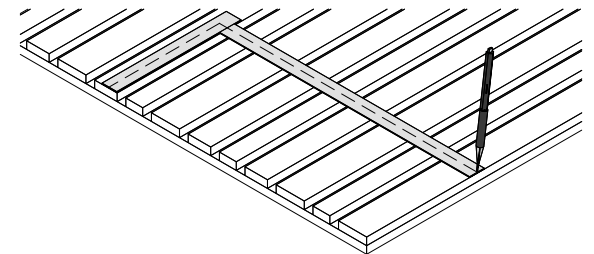


Timbre

Before installation, unpack and lay out all panels in their final location under the intended lighting conditions (natural and/or artificial). Review the panels from typical viewing angles to confirm the most visually pleasing arrangement and ensure the colors and finishes meet expectations before installation.


INSTALLATION INSTRUCTIONS (CONT.)

6. Now cut the panel along the marked line using a sharp saw blade.

Confirm that the direction of blade rotation is correct for ensuring a clean cut on the laminate surface of the Timbre slats.

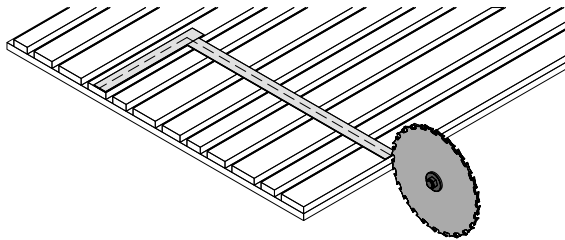


7. Remove the excess removable tape from your Timbre panel. If the cut edges of the slats are sharp, lightly sand the top edge using a medium-fine sand paper.

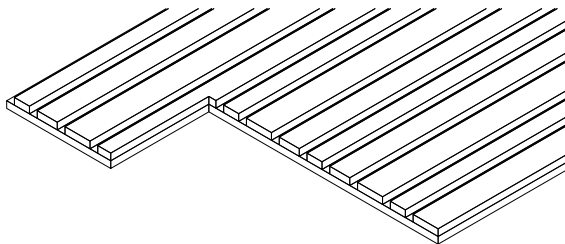


8. On the back of the Timbre panel, working quickly, use a back and forth pattern to apply an even bead of adhesive to the back of the panel as shown below. Your Timbre panel is now ready to be installed on the wall in the desired location.


Please note that the Timbre panel should be mounted on the wall within 60 seconds of applying the adhesive.

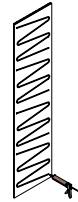

9. When placing Timbre panels beside each other, be sure to install them with the overhanging felt portion always butted up against a non-overhanging felt edge, this will ensure the correct spacing continues throughout the install for a seamless appearance.

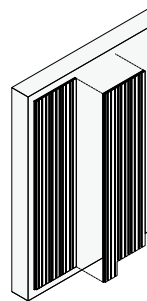

10. With the Timbre panel now located on the wall, apply firm pressure evenly over the entire surface of the Timbre panel. Now, using a countersunk screw suitable for your wall material, place a screw into the felt portion of both upper corners of the panel as shown below. Tighten the screw until the head of the screw is flush with the surface of the felt. Repeat this process for both corners at the base of the panel. Your Timbre panel is now fully installed.

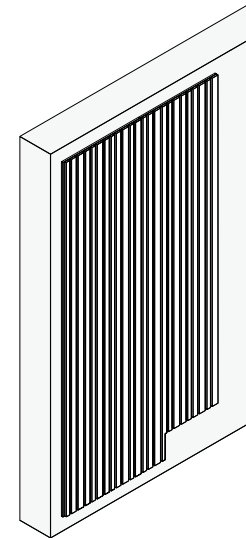


Colour Options

PLEASE NOTE: The images are only a sampling of the colours. Order a physical colour sample to obtain an accurate representation of our acoustic colours.


ELEMENT



WOOD GRAINS

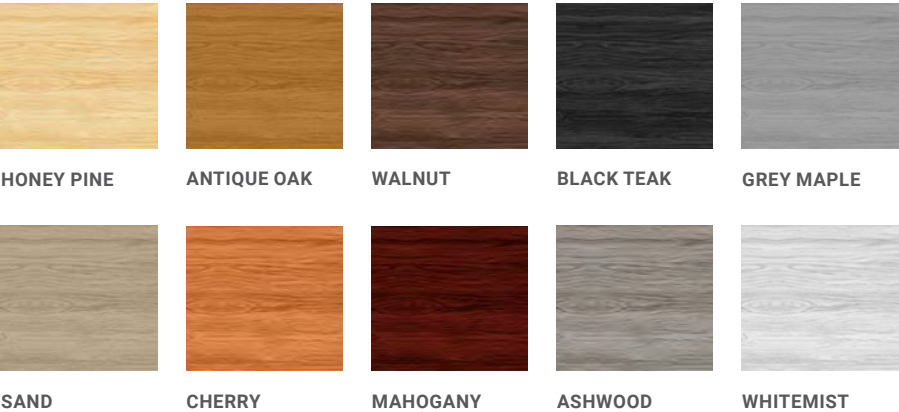

WILSONART LAMINATES

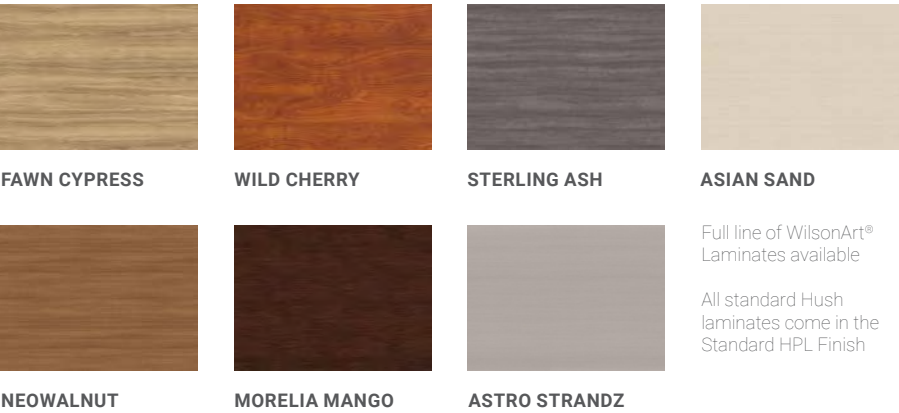

Full line of WilsonArt®
Laminates available

All standard Hush
laminates come in the
Standard HPL Finish



Tailored for Architects,
Interior Designers, and
General Contractors, we serve
as a fast, expert, and reliable
partner for all your project ideas.

Quiet by Design



Proudly Made
in North America



2 Year
Limited Warranty



**GreenGuard Gold®
Certified**
All Hush products
exceed GreenGuard
Gold® indoor air
quality standards



**Fungal Resistant
Certified**
EMSL Canada verified
zero mold growth
for Hush P.E.T. felt
(ASTM C1338).

hello@hushacoustics.ca · 204.454.1950
31 Limestone Bay, Stonewall, MB
Canada · R0C 2Z0

Follow us on Instagram
@hush.acoustics

hushacoustics.ca



Timbre V1 · 'Fawn Cypress' Laminate · Reception