

hush. acoustics

Install Guide

Beams





Quiet by design

1. Locate the 'End Cap Beams' (they can be identified by the built-up block on the inside) and the aluminum 'T-track'.


(Note; the top of the baffle will have small holes cut out for the installation hardware).


2. Insert the aluminum T-track into the End Cap Beam as shown below:

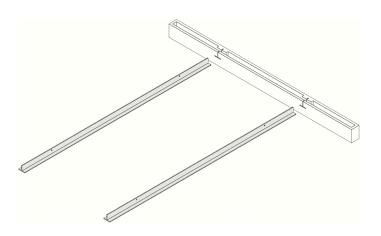

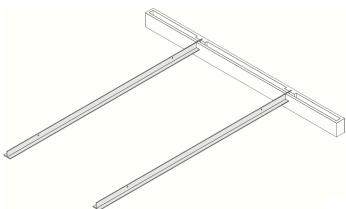

- 3. Now slide on the intermediate Beams (in numerical order if noted on the Beams), spacing the Beams using spacing tool provided.
- **4.** Add remaining Beams, ending with a Beam End Cap.

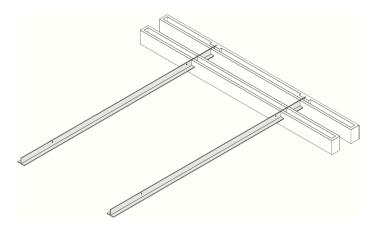

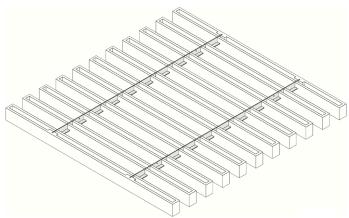



5. Next, attach the 'Clevis-Hook' onto the T-track in the pre-drilled holes.


(Ensure that the spring-loaded safety clip is in the closed position once the hardware is attached).

6. When all Clevis-Hooks have been installed, your Linear Beam is now complete and ready to be suspended from the ceiling.

(Please refer to the 'Ceiling Hardware Install Guide' for the final steps).

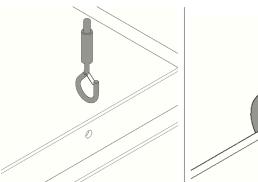

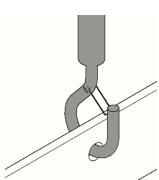

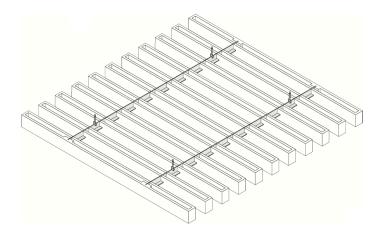

hush.acoustics

Beams · Install Guide | 2