



**hush.**  
*acoustics*

Install Guide


# Linear Baffles




Check the product page

*Quiet by design*


1. Locate the 'End Cap Baffles' (they can be identified by the built-up edge on one side) and the aluminum 'T-track'.

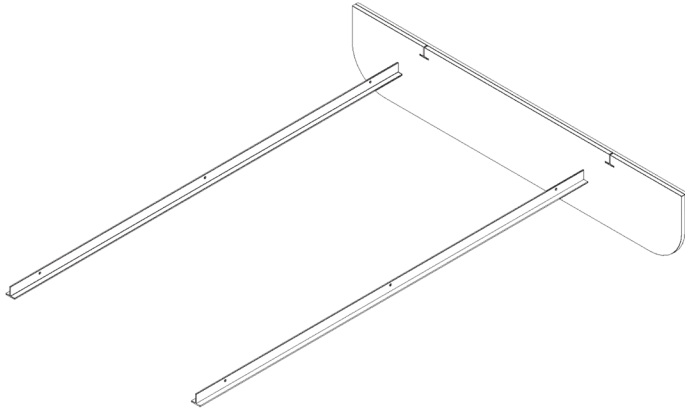


2. Insert the aluminum T-track into the End Cap Baffle as shown below:

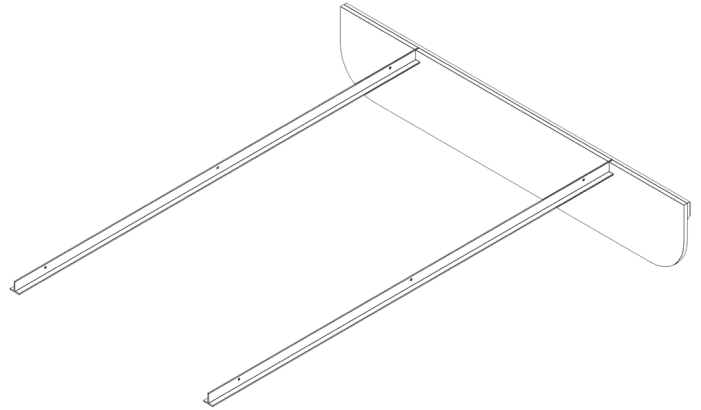

3. Now slide on the intermediate baffles (in numerical order as noted on the baffles), spacing the baffles using spacing tool provided.

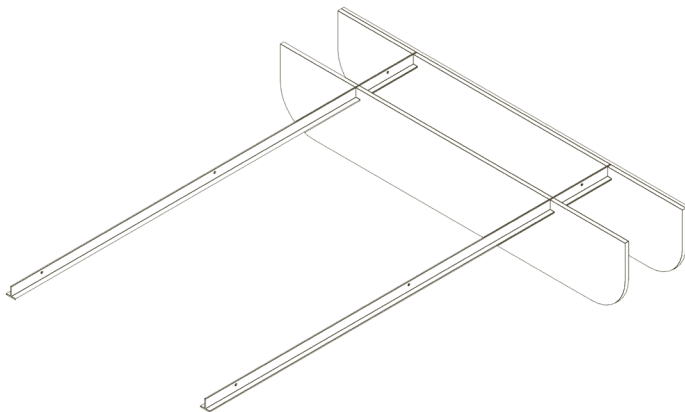


4. Add remaining baffles, ending with a Baffle End Cap.

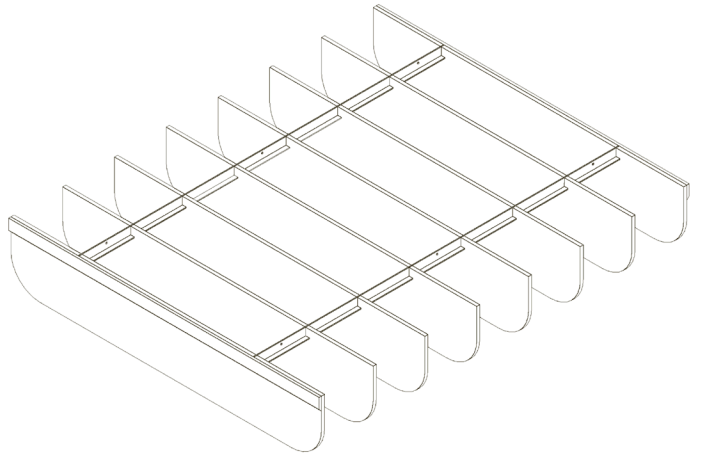

- 5. Next, attach the 'Clevis-Hook' onto the T-track in the pre-drilled holes.**

*(Ensure that the spring-loaded safety clip is in the closed position once the hardware is attached).*

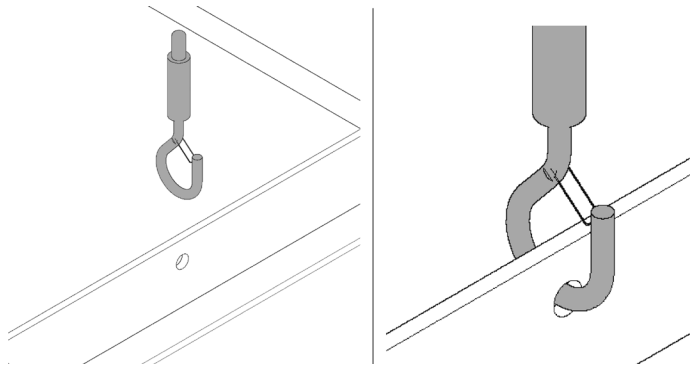

- 6. When all Clevis-Hooks have been installed, your Linear Baffle is now complete and ready to be suspended from the ceiling.**

*(Please refer to the 'Ceiling Hardware Install Guide' for the final steps).*

