




hush.
acoustics

Install Guide


Mural Panels

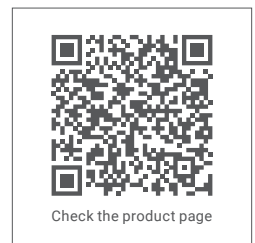


Quiet by design

1. Locate the back of the panel.


(Note: The back of the tile will have no beveled edges).

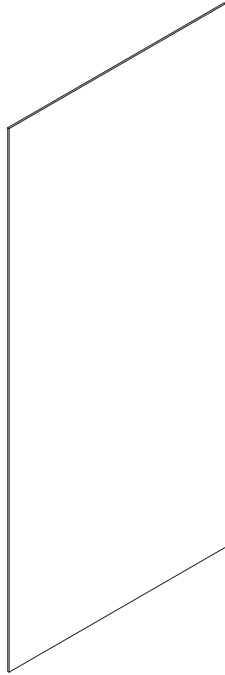


2. On the back of the panel, starting at the top corner, apply a bead of adhesive that is approximately 1/4" wide.

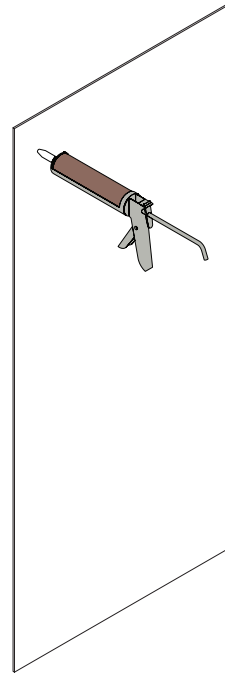

3. Continue the bead of adhesive across the width of the panel.

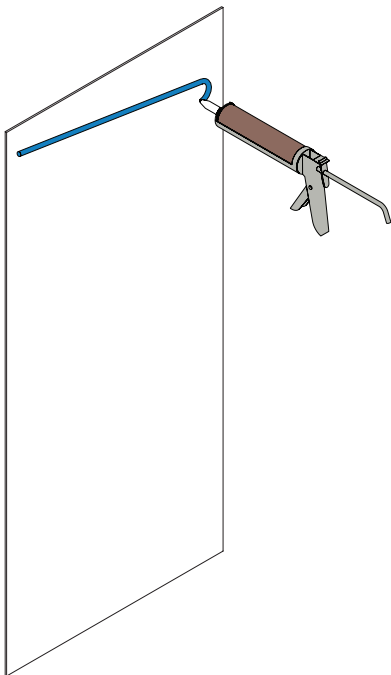


4. Working quickly, complete the panel in a back-and-forth pattern as shown below.

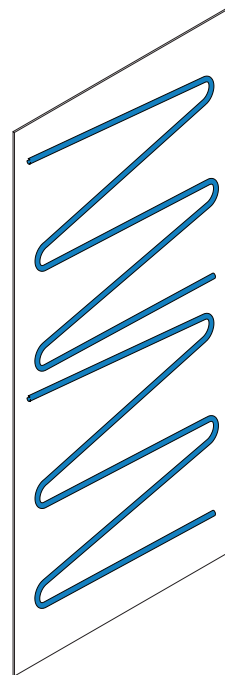

- 5.** Your panel is now ready to be installed on the wall in the desired location.

(Please note that the panel should be mounted on the wall within 60 seconds of applying adhesive).

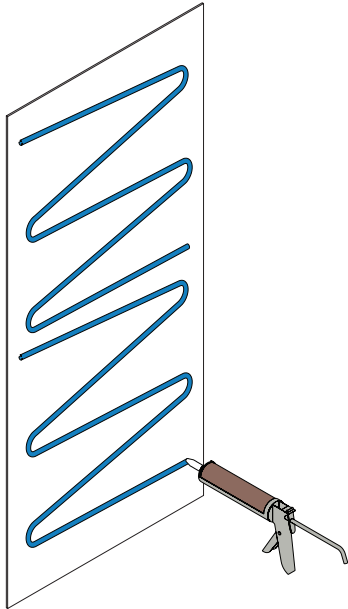

- 6.** With the panel located on the wall, apply firm pressure evenly over the entire surface of the panel and hold it in place for 30 seconds. The panel is now installed. Repeat steps 1-6 for all remaining panels.

